

**SANUPS**  
**E11A102A001US**  
**1 kVA**

Uninterruptible Power Systems

**Technical Specifications**

November '07

# Table of contents

<b>1. The System</b>	2
<b>2. UPS Requirements and Performance Characteristics</b>	2
2.1. Rating	2
2.2. Input Features	2
2.3. Output Characteristics	3
2.4. Battery Characteristics	4
2.5. Charger Characteristics	6
<b>3. Front Panel Information</b>	6
3.1. MIMIC panel	6
3.2. INV.ON / STAND BY button	7
3.3. Battery Test button	7
3.4. Clear button	7
<b>4. Communication links specification</b>	7
4.1. RS232 communication (on DB9 connector)	7
4.2. Optional Card slots	7
<b>5. LEDs and buzzer</b>	8
5.1. BUZZER DEFINITION	8
<b>6. Standards</b>	9
6.1. Safety	9
6.2. EMC	9
6.3. Susceptibility	9
6.4. Transportation	9
6.5. Environment temperature and humidity	9
6.6. Audible noise	9
6.7. MTBF	9

---

## 1. The System

**1.1.** This specification describes a single-phase, Hybrid \*, solid state Uninterruptible Power System herein after referred to as the UPS. The UPS shall operate in conjunction with the existing building electrical system to provide power conditioning and back-up power protection. The system shall consist of a solid-state inverter, rectifier, battery charger, and a 100 % rated, automatic, continuous duty static switch.

\* SANYO DENKI combines both line interactive and double conversion UPS technologies in the SANUPS E11A Hybrid UPS, delivering 3 modes of operation for high efficiency and reliability.

---

## 2. UPS Requirements and Performance Characteristics

### 2.1. Rating

2.1.1. The UPS is available in:

	US model
Apparent power	1 kVA
Active power @ 0~40 °C	0.7 kW

### 2.2. Input Features

2.2.1. Voltages: 120 V, 1 phase, 2 wire + ground

2.2.2. ON LINE AC input Range:

96 to 138 V (+15 / -20 %)

2.2.3. Input Frequency: 50 / 60 Hz Auto-select. 60 Hz (Default)

2.2.4. Input Frequency Range:

+/- 1, 3, 5 %(User selectable) +/- 3 % (Default)

Change mode Economy or Active filter to Double conversion

+/- 8 %

Change mode Double conversion to Battery operation

2.2.5. Current Values

	Sn (kVA)	Normal AC source (A)	Load (A)
Double Conversion: Min i/p voltage (96 V) and 120 V o/p	1	7.8	8.3
On Economy and 110.4 V i/p voltage	7	9.1	9.1

- 2.2.6. Recommended AC input Fuse: 15 A
- 2.2.7. Inrush Current: 35 A for 1 ms
- 2.2.8. Input Current Total Harmonic Distortion:  
  - < 10 % (Double Conversion Mode)
- 2.2.9. Power factor: > 0.7

## 2.3. Output Characteristics

- 2.3.1. Voltages: 120 V Single phase
- 2.3.2. Voltage Regulation:
  - +/- 10 %: Economy Mode
  - +/- 5 %: Active Filter Mode
  - +/- 2 %: Double Conversion Mode
- 2.3.3. Frequency: Auto-select 50 / 60 Hz.
- 2.3.4. Frequency Regulation:
  - +/- 1, 3, 5 % (User selectable)
  - +/-5 % (Default): Economy or Active Filter Mode
  - +/- 1 %: Double Conversion Mode
  - +/- 0.5 %: Battery Operation
- 2.3.5. Frequency converter mode: Can be used as a frequency converter
- 2.3.6. Slew Rate: < 1 Hz / second
- 2.3.7. Frequency Stability:
  - When UPS is synchronized on Normal AC source, the max phase shift is 31  $\mu$ s, and inverter phase leads Normal AC phase.
- 2.3.8. Overload detection: Current limited
  - Overload occurs when output VA or Watts are beyond 105 % of nominal load. The 1 kVA meets overload detection as soon as measured output VA are beyond 1.05 kVA or as soon as measured output Watts are beyond 0.74 kW.
  - The UPS may stay Double Conversion Mode in overload conditions:
    - < 200 ms    105%
  - If bypass inside voltage (< 144 V):
    - After the delay (200 ms), UPS switches to bypass without output break. Customer can select a mode of action when overload disappears.
    - Auto return to Double Conversion Mode without a break (Default) or Continue running in bypass
  - If bypass outside voltage:
    - After the delay (200 ms), Output is shutdown
- 2.3.9. Short circuit: 800 % of nominal load during 2 cycles
- 2.3.10. Restart after short circuit:
  - Customer must change a bypass fuse after turning off a MAIN SW.
- 2.3.11. Crest factor: 2.5:1

## 2.4. Battery Characteristics


- 2.4.1. Cold Start: The units can be started on battery.  
(Frequency depends on output frequency setting.)
- 2.4.2. The backup time of the standard version can be increased by adding battery cabinet.  
The battery cabinet can include the battery packs up to two.
- 2.4.3. Battery Replacement: Hot Swappable
- 2.4.4. Battery Type: 12 V / 34 W ( @15minute-rate). 9Ah ( @ 20 hour-rate)
- 2.4.5. Nominal Battery voltage: 24 V
- 2.4.6. Number of Batteries per Module: 2, in series
- 2.4.7. Battery test: manual start, every 180 days (by default).  
Can be adjusted to; every 30 days, 90 days, 180 days, or no test.
- 2.4.8. Leakage Current:  
340  $\mu$ A after end of backup time and full shutdown if DC circuit is on.
- 2.4.9. Battery Current Protection: Battery fuse 70 A
- 2.4.10. Battery protection against overvoltage :  
Yes, if charger voltage exceeds 33 V (2.75 V / Cell).
- 2.4.11. Pre-alarm level: By default, set to 1.8 V / Cell.
- 2.4.12. Battery to replace warning:  
The UPS has inner timer. The warning alarm sounds two times when the battery has reached its services life and before half a year.
- 2.4.13. Battery Supplier: CSB Battery  
Part Number: = HRL1234WF2FR
- 2.4.14. Backup time: 5 min.(at Std), 20,30,40,60min.(with option battery unit)  
**Typical backup times tables:**  
Backup times (in minutes) with 0.7 output power factor:  
Batteries fully charged (at least 12 hours on floating conditions) @ 25 °C.  
The battery aging is not taken into account in backup time prediction.  
The batteries supplier is not taken into account.

1 kVA with battery units: (min)

	10%	20%	30%	40%	50%	60%	70%	80%	90%	100%
<b>Std</b>	87	48	30	20	15	12	9	7	6	5
<b>Std + A*1 pack</b>	-	-	87	64	74	40	33	29	25	22
<b>Std + B*1 pack</b>	-	-	135	93	73	58	49	42	36	33
<b>Std + A*2 packs</b>	-	-	180	125	97	78	65	55	47	43
<b>Std + A*3 packs or B*2 packs</b>	-	-	285	195	135	103	91	80	70	64

A : BCE11A102A01US

B : BCE11A102A02US

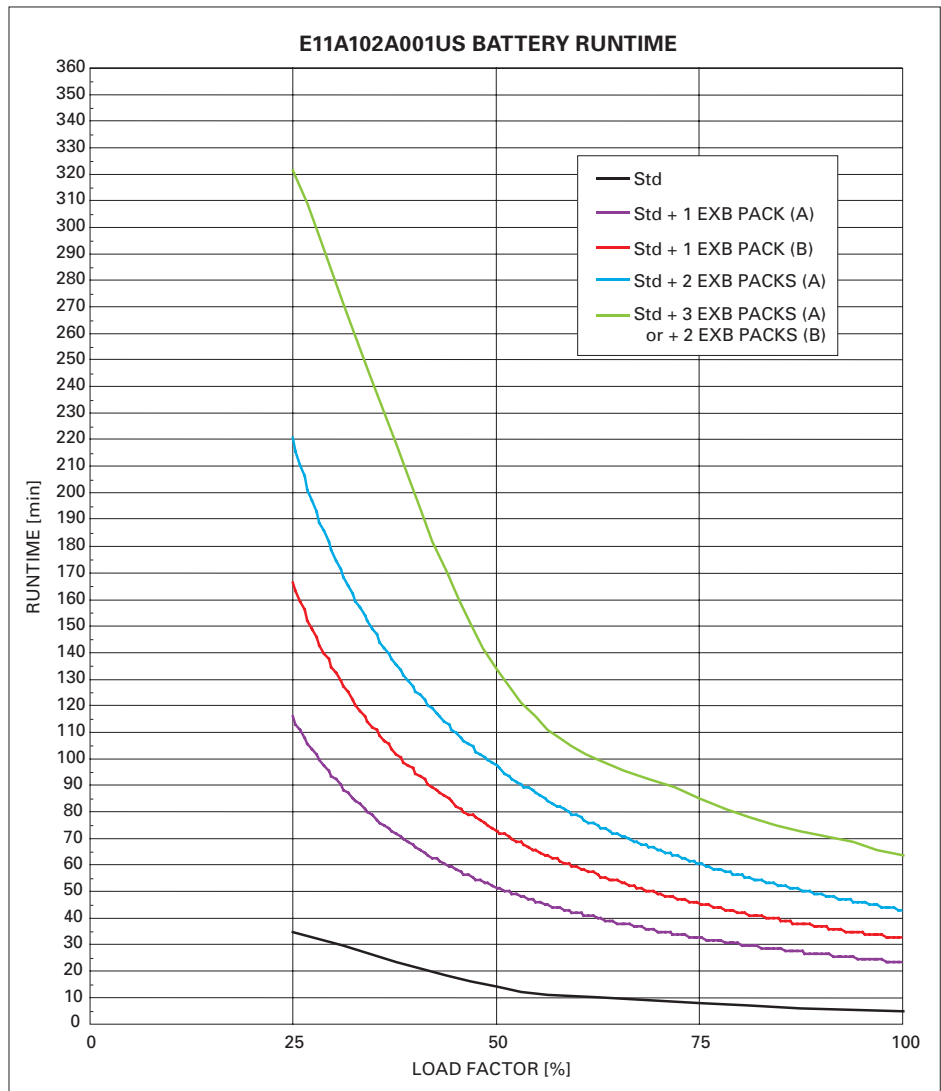

## 2.5. Charger Characteristics

- 2.5.1. Configuration: There is only one charger.
- 2.5.2. The charger is powered from the DC bus.
- 2.5.3. Float: The floating value is set to 27.3 Volts @ 25 °C.
- 2.5.4. Nominal charging current: 0.7 A
- 2.5.5. Floating value table vs ambient room temperature:

T (°C)	0	10	20	25	30	40
Voltage / cell	2.317	2.30	2.28	2.275	2.267	2.25
Total voltage	27.8	27.6	27.4	27.3	27.2	27.0

- 2.5.6. With EXB:

When an EXB battery module is connected, the total charging current is 0.7 A.

The floating DC value is set to 27.3 V.

- 2.5.7. Recharge time table vs number of extensions:

(after 100 % RCD load discharge then recharge to recover 90% of nominal backup time)

Version	Std	Std + 1 pack(A)	Std + 1 pack(B)	Std + 2 packs(A)	Std + 3 packs(A) or 2 packs(B)
Recharge time	12 hours	60 hours	90 hours	120 hours	150 hours

---

## 3. Front Panel Information

### 3.1. MIMIC panel

13 LEDs on the top

ALARM (red)

INV.ON STAND BY (green)

BATT. LOW (red)

LOAD LEVEL : 25%, 50%, 75%, 100% (green) / O.L. (red)

BATT. TEST (green)

INPUT (green)

OUTPUT (green)

ECONOMY (green)

DOUBLE CONVERSION (green)

3 buttons (INV.ON STAND BY / BATT.TEST / CLEAR)

### **3.2. INV.ON / STAND BY button.**

#### **3.2.1. ON switch**

Push time > 1 second: start the inverter, needs user confirmation if Commercial power supply is out of tolerances due to 10 ms output break during transfer from bypass to inverter.

Push time > 5 seconds: UPS cold start (if batteries connected and without Normal AC source)

#### **3.2.2. OFF switch**

Push time > 1 seconds (Default)\*: stop the inverter, needs user confirmation if Commercial power supply is out of tolerances due to 10 ms output break during transfer from inverter to bypass.

\*Customer can select the time to turn off: 1second (Default) or 3 seconds.

### **3.3. Battery Test button**

The UPS starts a battery test when this button has been pushed.

If the button is pushed again during battery test, the UPS stops a battery test.

### **3.4. Clear button**

Clear the result of battery test. And if the button is pushed during alarm beeping, the UPS stops alarm beeping.

---

## **4. Communication links specification**

### **4.1. RS232 communication (on DB9 connector)**

### **4.2. Optional Card slots:**

1 slot is available. Below is a list of optional cards.

4.2.1. LAN interface Card (PRE11A01-US) features a web interface, Simple Network Management Protocol (SNMP), Simple Mail Transfer Protocol (SMTP) email notification and keeps log files about UPS operation.










---

## 5. LEDs and buzzer

### 5.1. BUZZER DEFINITION

Definition:

-  Beep two times in 2 seconds: \*\* \*\* \* \* ...  
As soon as the UPS is on battery it must beep slow.
-  One beep: \*  
An inverter is on or off. Key clicked at a setup menu.
-  Continuous beeps: \*\*\*\*\*...  
On battery, when the UPS reaches the pre-alarm threshold it must beep quick.
-  Continuous tone: \*-----  
The buzzer must beep continuously when:  
The UPS has a mechanical failure.  
The battery is exhausted.
-  Beep four times in 3 seconds: \*\*\*\* \* \* \* \* ...  
The load devices connected to the output exceed the rated capacity.
-  Beep seven times in 2 seconds: \*\*\*\*\* \* \* \* \* \* ...  
The battery check result was an error.
-  Beep five times in 2 seconds: \*\*\*\*\* \* \* \* \* \* ...  
The battery has reached before half year of its service life.  
The battery has reached its service life (The red BATT.LOW indicator blinks).

Customer can change the buzzer parameters:

- a. All beep
- b. Only beep when the UPS has mechanical failure
- c. Key clicks at a setup menu only.
- d. Both b and c.

**Note that:**

In any case, it is possible to stop the buzzer at any time, until the next buzzer, by pressing CLEAR button.

---

## **6. Standards**

### **6.1. Safety:**

The UPS meet UL1778 stds. It is UL listed.

### **6.2. EMC:**

UPS are class A according to FCC Part 15 Subpart B.

### **6.3. Susceptibility:**

IEC 61000-4-2 (ESD): level 4.

IEC 61000-4-5 (Surge): level 4.

### **6.4. Transportation:**

JIS Z 0200 (drop and vibration tests): Yes.

### **6.5. Environment temperature and humidity**

6.5.1. Ambient operating temperature: 0 to 40 °C (32 to 104 °F)

6.5.2. Ambient storage temperature: -15 to 50 °C (5 to 122 °F)

6.5.3. Humidity: 30 to 90 %.

6.5.4. Altitude: up to 2000 meters (6000 ft.) without derating.

### **6.6. Audible noise**

6.6.1. Max 40 dBA online (buzzer not included)

### **6.7. MTBF**

125,000 hours (est.)

**Power Systems Division**

**SANYO DENKI *AMERICA, INC.***

468 Amapola Avenue

Torrance, CA 90501

Tel: (310) 783-5400

Fax: (310) 782-8021

Contact Us:

[power@sanyo-denki.com](mailto:power@sanyo-denki.com)